L-shaped under-bed support

Double-fold point at 1025 & 775

For strength and transport protection

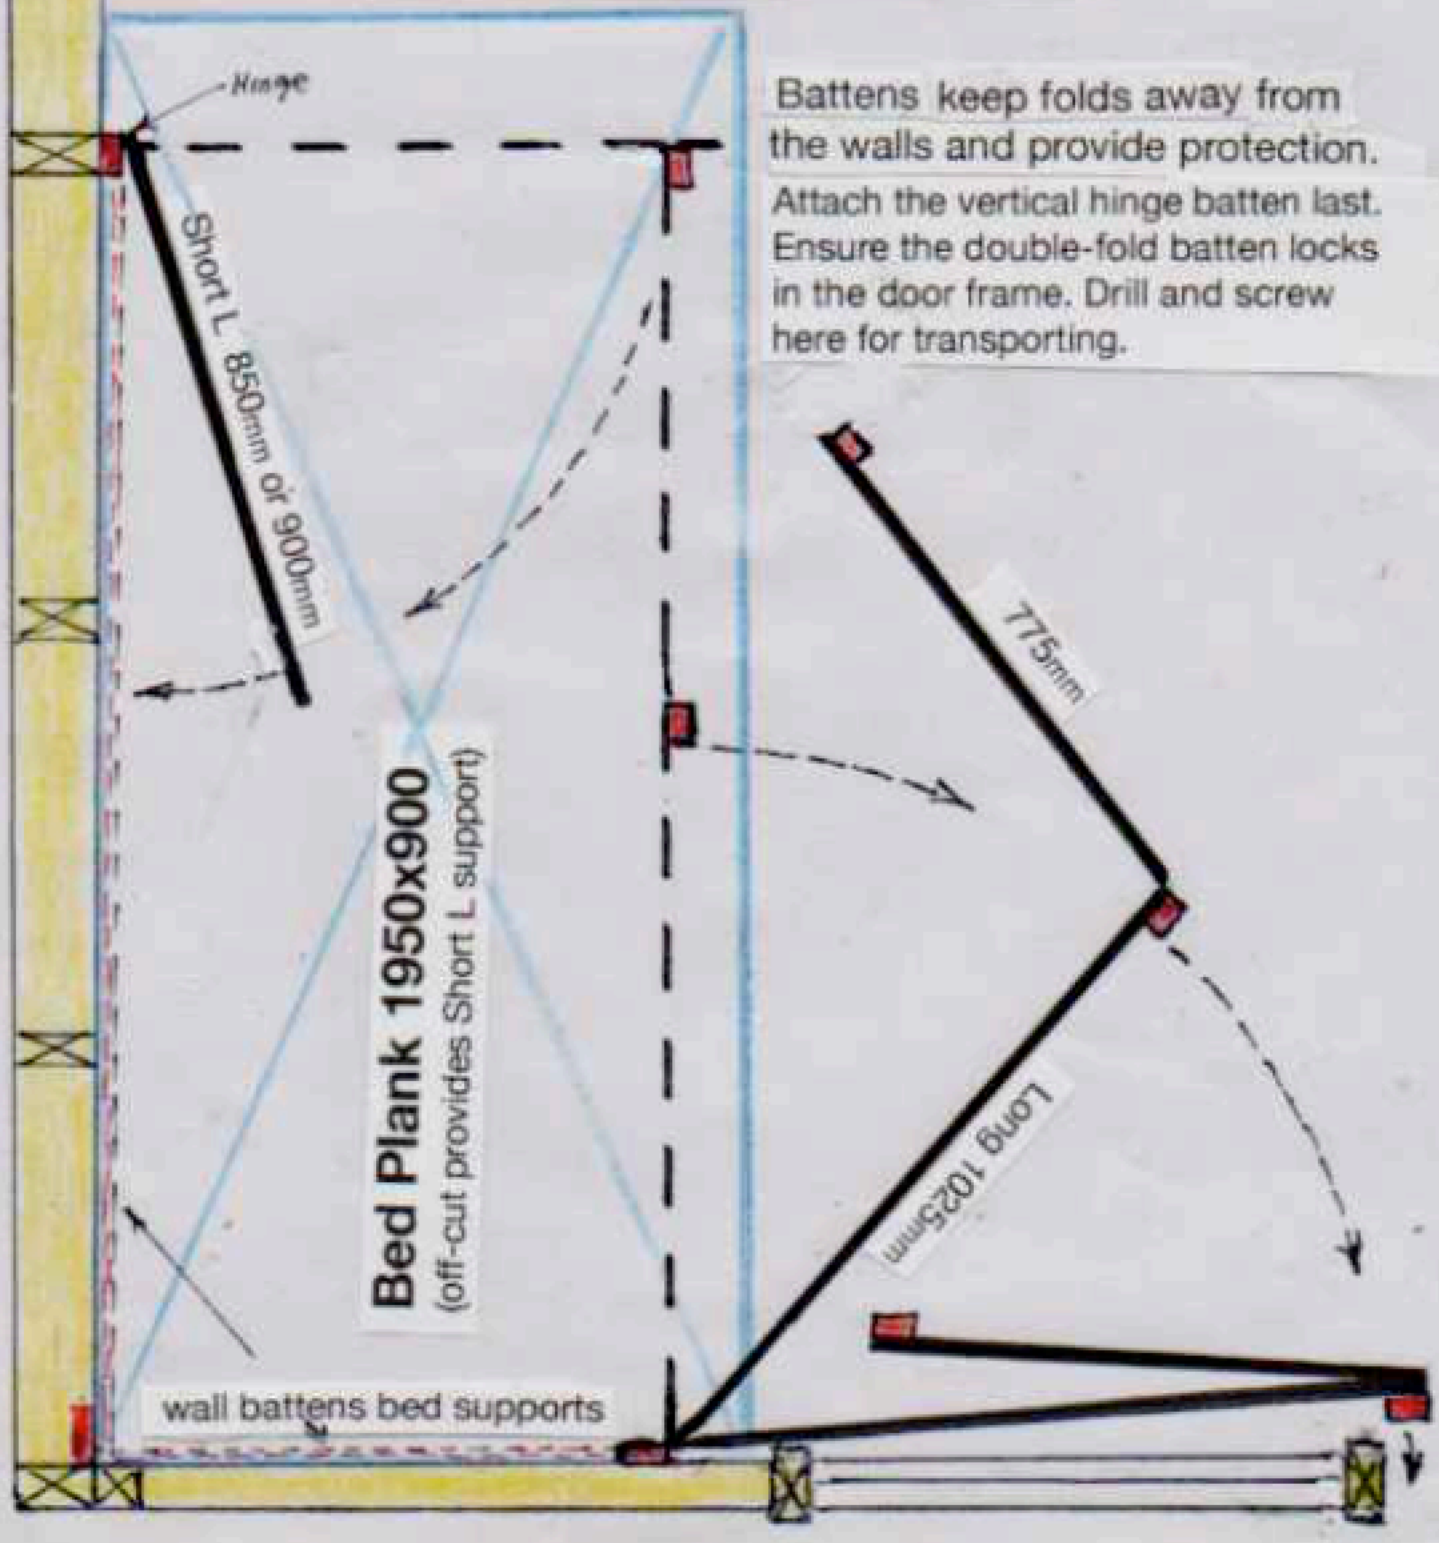

Battens keep folds away from the walls and provide protection.

Attach the vertical hinge batten last. Ensure the double-fold batten locks in the door frame. Drill and screw here for transporting.